## **TRON Hex Converter installation tutorial**

Step 1: Find the provided installation software TRON Hex Converter.exe



Step 2: Double-click TRON Hex Converter.exe icon, the following installation interface will appear, click Next.

Welcome Welcome to the installer for TRON Mex Converter It is strongly recommended that you exit all Windows programs before continuing with this installation. If you have any other programs running, please click Cancel, close the programs, and run this setup again. Otherwise, click Next to continue.

Step 3: After the following interface appears, select the option in the red box, and then click Next.



Step 4: After the following interface appears, click Next.

nter your user informatio	n and click Nex	t to continue.	
ame:			
licrosoft			
ompany:			
licrosoft			

Step 5: After the following interface appears, click Next.

Installation Folder	
Where would you like TRON Hex Converter to be ins	talled?
The software will be installed in the folder list different location, either type in a new path, or an evicting folder	ed below. To select a click Change to browse for
an existing lotuer.	
Install TRON Hex Converter to:	
C:\Program Files (x86)\TRON Hex Converter	Change
Space required: 940 KB	
Space required: 940 KB Space available on selected drive: 19.49 GB	
Space required: 940 KB Space available on selected drive: 19.49 GB	
Space required: 940 KB Space available on selected drive: 19.49 GB	
Space required: 940 KB Space available on selected drive: 19.49 GB	

Step 6: After the following interface appears, click Next

There would you like the	shortcuts to be installed?
nere would you line the	
'he shortcut icons will b don't want to use the def select an existing folder	e created in the folder indicated below. If you Sault folder, you can either type a new name, or from the list.
Shortcut Folder:	
TRON Hex Converter	
Install shortcuts for	current user only
◉ Install shortcuts for ○ Make shortcuts availab	current user only ble to all users
◉ Install shortcuts for ○ Make shortcuts availab	current user only ble to all users
◉ Install shortcuts for ○ Make shortcuts availab	current user only ble to all users
◉ Install shortcuts for ○ Make shortcuts availab	current user only ble to all users

Step 7: After the following interface appears, click Next.



Step 8: After the following interface appears, click Finish.

